

# Inter-Tel® Encore CX®

---

## Voice Messaging

## Dial

To access your Voice Mail box

\*

Enter Your Extension Number

Enter Your Password and Dial

#

When Listening to the greeting

Record Greeting

91

Check Greeting

92

To access the Answering

\* 0

Machine/System Voice Mail Box

Enter the System Voice Mail Box

Password and Dial

#

## When listening to the greeting

Record Greeting	91
Check Greeting	92
Delete Greeting	93
To start playing messages	1
When replaying messages:	
Pause	#
Save and go to next	2
Erase and go to next	3
Go to start of message	4
Go to previous message	5
Erase all messages	6
Go back 10 Secs.	7
Go forward 10 Secs.	8
Forward the message	9
Return Call	0